

HUGHES SOLID STATE DIGITAL LED QUARTZ WATCH
HOURS-MINUTES-SECONDS-MONTH-DATE-DAY
"HANDS-OFF" SECONDS (continued)

Setting the Day

Press the SET button a fourth time and the day will start to flash. Select the correct day by pressing the TIME button as before. Days of the week are abbreviated to two letters: MO, TU, WE, TH, FR, SA, SU.

Setting AM/PM

Press the SET button a fifth time and the AM/PM designation will begin to flash. Choose either AM or PM by pressing the TIME button. If the AM/PM setting is incorrect, the date will change at noon instead of midnight.

Setting Hours


Press the SET button a sixth time and the hour will begin to flash indicating the "hour set mode". Set in the correct hour by pressing the TIME button until the desired number appears.

Setting Minutes

Press the SET button a seventh time and minutes will begin to flash. If you are not interested in setting the watch to the exact second, simply press the TIME button until the correct minute appears. For greater accuracy, you will need a telephone or special radio time signal. Using either of these sources, listen for the next full minute time signal (e.g., 5:46:00-five forty-six exactly). At that instant press the TIME button and hold it down until the correct minute flashes into view. The watch is now set to the nearest second*.

*A special feature of this watch delays the start of advancing minutes by 2 to 3 seconds. During this interval, the TIME button can be pushed and released, returning seconds to zero but not advancing minutes. This feature is useful in correcting a watch which is running slightly fast.

CHANGING BATTERIES

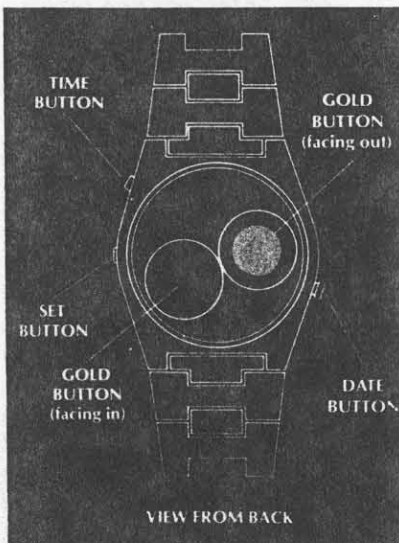

Dim display digits or the continuous display of one digit will indicate that it is time to replace batteries.

To change batteries, turn the watch upside down and remove the two battery hatch covers using a dime as a screwdriver. After removing the battery hatch covers, turn the watch over again and tap it gently. The old batteries will fall out. When

inserting new batteries, note (from illustration) that one faces up, the other down. If battery positioning is not correct, permanent damage to the watch may result. After inserting new batteries, replace the hatch covers tightly and reset the correct time per setting instructions. It is safe to allow the batteries to run down completely inside the watch provided that they are replaced shortly thereafter.

IMPORTANT:

Only the following battery types may be used for replacement: Eveready 357 or Ray-O-Vac RW-22.