


HUGHES SOLID STATE DIGITAL LED QUARTZ WATCH

HOURS-MINUTES-SECONDS-MONTH-DATE-DAY

"HANDS-OFF" SECONDS

OPERATION

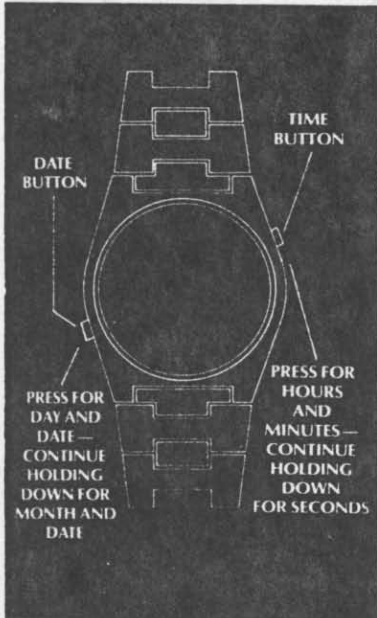


To display the time in hours and minutes, simply touch the TIME button. The hours and minutes will remain visible for a short period of time. If the TIME button is held down continuously, hours and minutes will disappear and a flashing seconds display will begin.

To display the day and date, simply press the DATE button. If the DATE button is held down continuously, the day and date will disappear and the month-date display will commence.

For "hands-off" seconds, hold both buttons down for a moment and release. Seconds will continue to flash until either button is pressed. If this is not done, the display automatically turns off after a minute or two to preserve battery life.

SETTING INSTRUCTIONS

The SET button is used to select specific watch functions for setting. The TIME button is used for the actual setting operation. Pressing the SET button once with a pointed object, such as a pencil or ball point pen, starts the year number flashing, signifying that the year can be set. Pressing it again enables you to set the month; the third time, the date; the fourth, the day; etc. Note that the SET button operates sequentially. The following table illustrates the SET button cycle

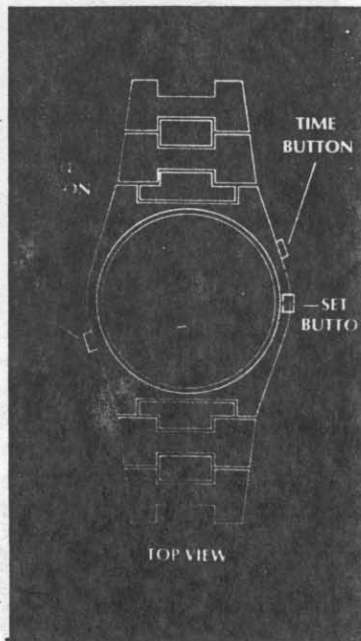

<u>ACTION</u>	<u>SET MODE</u>	<u>FLASHING DISPLAY</u>
Press once	Year	OY
Press twice	Month	11-
Press 3 times	Date	-17
Press 4 times	Day	SU
Press 5 times	AM/PM	PM
Press 6 times	Hour	5:
Press 7 times	Minute	:46
Press 8 times	Normal	None

Setting the Year

Press the SET button once and the year number will start flashing. The watch is now in its "year set mode". To change the year, simply hold the TIME button down and the year number will begin to advance. When the desired number flashes into view, release the TIME button. The correct year is now set into the watch. The year number is coded as follows:

<u>FLASHING DISPLAY</u>	<u>REPRESENTS</u>
OY	Leap Year, e.g., 1976, 1980, 1984, etc.
1Y	Year after Leap Year, e.g., 1977, 1981, 1985, etc.
2Y	Two years after Leap Year, e.g., 1978, 1982, 1986, etc.
3Y	Three years after Leap Year, e.g., 1979, 1983, 1987, etc.

Once the correct year is set into the watch, it is never necessary to reset it to adjust for leap year variations.

Setting the Month

Press the SET button a second time and the month will begin to flash, indicating that the watch is in its "month set mode". To change the month, press the TIME button and hold it down until the correct number appears.

Setting the Date

Press the SET button a third time. The date will begin to flash, indicating the "date set mode". To change the date, press the TIME button until the desired date appears. The watch is programmed to adjust itself automatically for 28, 29, 30 and 31 day months. Consequently, resetting is never necessary to compensate for calendar variations.